

Medway Clipper 100 Operators **Manual**

This manual is approved for use with Clipper 100hp aircraft it must remain with the aircraft, and not be amended.

All pilots should read this manual before flying as pilot in command of the aircraft.

Note : If you have any reservations about this Aircraft in any way, or Flying in this Aircraft please refrain from doing so and contact Medway Microlights to resolve the issue.

Contents

1. Introduction
2. Description of the Aircraft
3. Limitations
4. Emergency Procedures
5. Normal Operating Procedures
6. Performance
7. Weight & Balance
8. Rigging and De-rigging
9. Routine Maintenance
10. Repairs
11. Parachute Safety Systems

Useful Abbreviations

IAS:	Airspeed as shown by the airspeed indicator
CAS:	Indicated airspeed corrected for position and instrument error
TAS:	CAS corrected for altitude and temperature
GS:	Speed of the A/C relative to the ground
Va:	Manoeuvring speed. Maximum speed for full control deflection without overstressing the airframe.
Vfe:	Maximum speed at which the flaps can be extended
VR:	speed at which the aircraft is rotated during take-off
VNE:	The never exceed speed of the Aircraft
VNO:	Maximum cruising speed, (Normal Operating)
VS ₁ :	Stalling speed in clean configuration
VS ₀ :	Stalling speed with flaps extended to Land configuration
Vx:	Best angle of climb speed (best gain in altitude for shortest horizontal distance).
Vy:	Best rate of climb speed (best gain in altitude in the shortest time).

1. **INTRODUCTION:** The Clipper is a three-axis Microlight aircraft certified in the United Kingdom to British Civil Airworthiness requirements (BCAR) Section S at Issue 5.

2. DESCRIPTION OF THE AIRCRAFT

Introduction: The Clipper is a fabric covered high wing monoplane with conventional tailplane and a fixed undercarriage. The seating is two-place, side by side and the controls are 3 axis.



Flying Controls: The cockpit is equipped with controls to fly the aircraft from either the left or right seat. The central control stick is accessible from either seat, both foot wells are fitted with rudder pedals and there are two throttle levers from the instrument panel. The rudder pedals are mechanically linked to the nose wheel for ground steering.

Electrically actuated flaps are controlled from a centrally located switch with an indicator to report position. Pitch trim is also electrically actuated and controlled by a toggle switch with an adjacent indicator for displacement.

A finger operated brake lever is fitted on the control stick for the main wheel parking brakes.

Engine Controls: The throttle, choke and magneto switches are mounted on the instrument panel. The throttle control sense is conventional opening with a forward rotation and the magneto switches are up for on.

The choke is unconventional for an aircraft as it requires to be pulled for "on", cannot be locked "on" and will retract when let go to ensure the mixture returns to normal.

Other Equipment. Conventional four point harness restraint for each occupant. The lap strap provides the lateral and fore/aft restraint whilst the shoulder straps provide torso slump and vertical security. It is recommended that lap strap tension be adjusted first, followed by the tensioning of the shoulder webs. The shoulder straps are worn at all times for maximum security. A central buckle secures the harness and a lifting action releases the harness in the event of an emergency or standard egress.

Doors: Pilot and passenger doors are constructed from a lightweight tubular steel frames covered with polycarbonate sheets. The top edge of the doors are hinged and, when released, each door is held up via a gas strut. Latches along the lower edge secure each door when closed. The door latches are operated by rearward rotation of the handles to release and forward rotation to secure.

Fuel Tank: The aircraft is fitted with a 100 litre fuel tank; the full capacity is only available for use when the aircraft is flown solo. Tables and charts in Section 7 (Weight & Balance) detail the fuel capacity variation with crew mass.

A fuel drain is located under the fuselage behind the seats. A fuel drain is required prior to each flight in order to purge water and any loose sediment that may be in the tank sumps.

3. LIMITATIONS

The aircraft has been cleared for General Handling up to 60° angle of bank and slow speed flight including stalling. The aircraft is not cleared for spinning or aerobatic manoeuvres and is subject to the following limitations:

- Day VMC conditions, within sight of the surface.
- Certified to a "permit to fly" standard.
- Use for aerial work, other than flight instruction, prohibited.
- Certified to a UK only standard; permission may be required from other host countries for over flight etc.
- May not be flown above 10,000ft standard pressure altitude.
- Maximum of 2 occupants
- Weight and balance as per section 7
- Flight load factors:

	+4g at Va
	+4 / -1.5g at Vne
- Never exceed speed (Vne) 146mph IAS
- Design manoeuvring speed (Va) 104mph IAS
- Flap limiting speed (Vf) 82mph IAS
- Stall speed, flaps deployed 42mph IAS
- Stall speed clean 44mph IAS
- Aileron, elevator and rudder limitations:
 - Airspeed up to Va: It is permissible to apply full aileron, rudder and elevator deflections if appropriate and safe to do so. This will be at the discretion of the pilot and full range control inputs should only be used by experience pilots as it will cause large and rapid responses.
 - Between Va and Vne: It is only permissible to apply up to 1/3rd control deflections between Va and Vne. It should be noted that small control inputs at higher velocities will have a large effect on the aircraft directional response so caution should be used at all times.
- Landings:

Cross wind limit	20mph
All directions	30mph
- Flight in rain: Avoid if possible to prevent propeller damage.
- Doors: Flight without the doors fitted is not permitted

Engine:

Engine RPM

912 UL & S: 5800 rpm for five minutes Max Continuous power 5500 rpm

Cylinder Head Temperature

912UL: 150 degrees C

912S: 135 degrees C

Water Temperature

912UL & S: 115 degrees C

Exhaust Gas Temperature

912UL & S: 880 degrees C take off otherwise 850

Oil Pressure

912UL & S: Max 7-bar normal 2-5 bar Minimum 1.5 bar

Oil Temperature

912UL: 140 degrees C Minimum 50 degrees C

912S: 130 degrees C Minimum 50 degrees C

Fuel pressure

912UL & S: 0.15 – 0.4 bar

Required minimum cockpit equipment :

- Air speed indicator
- Altimeter
- Engine Temperatures and pressure
- Compass
- Fuel gauge

Control sense and direction of the control surfaces stated:

The control senses are :

Roll:	Stick right for right wing down
Pitch	Stick back for nose up
Yaw	Right peddle forwards for nose right
Trim	Switch up for nose down, down for nose up
Wing Flaps	Switch down for flaps down
Throttle	Forward to increase power
Propeller	Fixed Pitch
Mixture	Fixed
Switches	Up for on Down for off.

4. EMERGENCY PROCEDURES

Electronic Instrument failure Land "as soon as practicable"

Engine Failure Before Take-Off: Close throttle apply parking brake, all switches off.

Engine Failure After Take-Off: Lower nose to establish an approach speed of 60mph IAS and land straight ahead or near to straight ahead, do not attempt to turn back if the aircraft height is below 500ft.

Engine Failure In Flight: Lower nose and trim for the best glide (60 mph IAS). The glide ratio will be lower than the normal engine idle, at about 7.5 to 1, due to the additional drag of the static propeller. On approach it is best practice to approach with the flaps raised and aim for a touch down 1/3rd of the way down the usable runway to ensure threshold clearance. Full flap should be deployed to ensure a safe touchdown and the airspeed maintained to the normal round out height; this will ensure an early touchdown. Hold off , land as normal.

Engine Fire in Flight: Close fuel cock, open throttle fully, make emergency radio call if time permits, when engine stops turn off magneto switches but keep battery master on for the flaps, treat as engine failure in flight. On landing raise the flaps, turn off battery master and vacate aircraft as soon as possible after landing.

Fire in the cockpit: Close all ventilation, switch off all unnecessary electrical services and land immediately and vacate the aircraft.


Emergency Landing on Water: Try to land into wind with a high nose attitude. Before impact, pilot and passenger must be prepared to release their harnesses, it may also be beneficial to release the doors before impact. If wearing lifejackets, do not inflate them until outside the aircraft. Note that it is very hard to judge height above water.

5. NORMAL OPERATING PROCEDURES

The following section contains the normal operational procedures for the Clipper. For a more complete list refer to the aircrafts Type Acceptance Data Sheet (TADS).

The aircraft has in Airspeed Indicator (ASI), calibrated in mph which will display Indicated Airspeed (IAS) for the conditions flown on the day. The accuracy of the aircraft ASI will be dependant on the pitot-static system, the altitude flown and the Outside Air Temperature (OAT) of the day.

Calibration of the pitot-static system has been carried out by the manufacturer and the locations of the pitot and static references have resulted in an over reading ASI following the graph shown below:

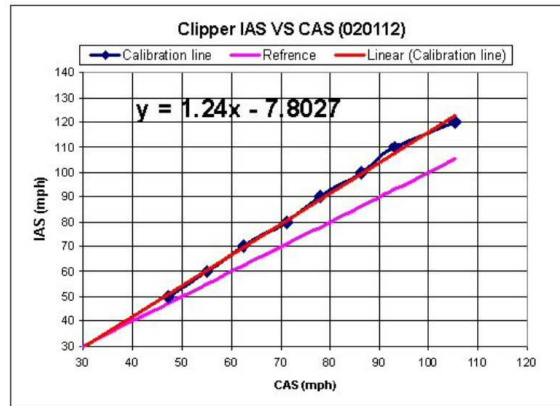

To use the graph to correct for the pitot-static installation errors find the IAS along the vertical axis and move across the graph to find the intercept with the red line; the CAS can then be read off of the horizontal axis.

For flight the following installed instruments must be serviceable:

- ASI.
- Altimeter .
- Slip Indicator.
- RPM.
- Compass.
- Water or Cylinder Head Temperature.
- Oil Temperature.
- Oil Pressure.

The Placard should display the following data:

Airspeeds For Normal Operations

Placard for the A/C

Stall Speed Full flaps	42mph (IAS)
Stall speed clean	44mph (IAS)
Best climb	70mph (IAS)
Approach speed	60mph (IAS)
Best Glide	56mph (IAS)
Flap limiting speed (Vf)	82mph (IAS)
Design Maneuvering speed (Va)	104mph (IAS)
Never exceed speed (Vne)	146mph (IAS)
Cross wind limit	20mph

Pre-Flight Inspection.

Engine. Carry out an engine pre-flight inspection following the instructions contained in the Engine Manual

Oil. Oil level must be checked before each flight. A panel in the upper engine cowl has been provided for access to the oil filler cap on top of the oil tank; the oil is checked using a dipstick located beneath the filler cap and the correct level lies between the lines marked on the stick. Care should be taken, as the oil reservoir may be hot.

If checking the oil when the engine is cold it is recommended that the engine be rotated to ensure any oil in the dry sump is returned to the oil tank; this will be noted when a gurgling sound comes from the oil tank.

Caution: ensure both magneto switches are off before attempting to rotate the engine by hand using the propeller.

Oil changes must be performed at the Rotax service intervals (See engine Manual). When changing the engine oil the oil filter must also be replaced with a filter of Rotax approved specification.

Coolant. The coolant & water must be checked prior to flight by observation of the water level at the pressure relief filler cap. An access panel has been provided to enable the water check without the need to remove the engine cowl (upper central panel). The water level should be within 30mm of the cap rim to be acceptable.

Should additional coolant be required then fill with a minimum water/antifreeze mixed to a 50/50% ratio.

Aircraft. The following is a brief summary of the minimum pre-flight inspection

Cockpit

- Master switch OFF
- Ignition/Mag switches OFF
- Condition of choke and choke cable
- Condition and security of all flying controls.
- Check condition of all instruments.
- Check harnesses for security and condition.
- Check seats are secure.
- Check fuel filter is clean.
- Check sufficient fuel for the planned flight.
- Check wing leading and trailing edge bolts secure

Underside

- If the aircraft has not flown within 24 hrs, drain a small amount of fuel from the drain tap using a standard tool and check for water.

Engine

- Check oil level and condition in oil tank (Access panel on the right, gurgle if cold)
- Check water level (access panel upper centre)
- Check security of engine mounts (lift engine via propeller blades)
- Check for blockages such as birds nests in the engine cowling
- Check for any fluid leaks on the underside of the engine cowling.
- Check security of the carburetors observing via the cooling holes either side./
- Check prop bolts protruding from securing nuts
- Check cowling securing screws are all tight.

Starting from the front of the A/C, inspect:

- Condition of the propeller: no cracks or nicks
- Condition and security of the spinner, if fitted
- Condition of the nose wheel tyre and its inflation pressure (26psi)
- Security of the nose wheel spat and fairing, if fitted.

Moving down the starboard side of the aircraft (right) and along the starboard wing, inspect:

- Condition of door, hinges and latches
- Starboard undercarriage leg
- Tyre condition and pressure (26psi)
- Security of wheel spat if fitted
- Check for any hydraulic leaks from brake / pipes
- Security of wing strut lower attachment bolt
- Jury strut brackets
- Wing struts and jury struts straight
- Looking through the inspection panels in the lower surface, check that the wing strut forward upper attachment is secure and the condition of the aileron pulleys and cables
- The general condition of leading edge fabric and covering of the wing
- Aileron movement and hinges, attachment of cables and control horn
- Check the Flap hinges, and security of actuating rod attachments
- Condition of wing fabric covering and security of battens

Moving towards the rear of the A/C, inspect:

- Check the fabric covering on tail surfaces.
- Security of horizontal tail mounting bolts and fabric covering, and the lacing
- Check the elevator and hinges, horns and cables
- Check for any damage to the Trim-tab rudder and hinges, horns and cables
- Look at the general alignment of vertical and horizontal tail surfaces
- Check the condition of bracing wires and their terminations

Moving forwards to the port wing (left), inspect:

- Check the Port undercarriage leg
- Check the tyre condition and pressure (26psi)
- Security of wheel spat
- Check for any hydraulic leaks on the brakes /pipes
- Security of wing strut lower attachment bolt
- Jury strut brackets
- Wing struts and jury struts straight
- Check the condition of wing fabric covering and security of battens
- Flap, hinges, and security of actuating rod attachment
- Aileron movement and hinges, attachment of cables and control horn condition
- Looking through the inspection panels in the lower surface, check that the wing strut forward upper attachment is secure and the condition of the aileron pulleys and cables
- General condition of leading edge fabric and covering
- Condition of door, hinges and latches
- Static vent is clear of obstructions
- Standing back from the A/C assess the overall symmetry of the aircraft.

Starting.

The actual starting procedures for a particular engine are contained in the relevant engine manual supplied with this manual.

Pre Start

Remove Pitot cover before Flight

Seat belts on

Full and free movement of controls

Set Altimeter

Fuel is sufficient for flight

Check Brakes, lock on

Set throttle and choke (cold start use choke and no throttle)

Master switch on

Ignition / Mags on

Instrument (EFIS) switched OFF (check radio's off)

Start Engine

Switch instrument (EFIS) and radio (if required) ON

Check T's and P's start to rise

Taxiing.

Taxi checks

- Brakes functioning (release lock and re-engage)
- Compass moving when aircraft turned
- Slip ball moving when aircraft turned
- Engine temps warming, no limits have been exceeded

Before taxiing ensure that the engine has run for at least 2 minutes from cold. Warm engine up at 2000 rpm for min two minutes; continue at 2500 until correct operation temperatures are reached (50C for oil). Taxi at no more than a brisk walking pace, somewhat less if the surface is rough. Steering is effected through the rudder pedals, which are linked directly to the nose wheel. Microlight aircraft are easily blown over in winds over 28mph=25*kts. It is imperative that when taxiing in strong winds the correct control placements are used. With a head-wind hold the stick into wind and the elevator neutral. With a tail-wind hold the stick away from the wind with the elevator held down.

Before take off

Warm engine up at 2000 rpm for min two minutes; continue at 2500 until correct operation temperatures are reached

Before Take-off Checklist:

- Position the aircraft into wind, brakes held on
- Set recommended warm up RPM
- **C – Controls:** full and free movement the correct sense
- **H - Harness and Hatches:** hatches secure, no loose objects
- **I – Instruments and engine** instruments set and serviceable, T's & P's, choke off, brakes on, Mag drops (3000rpm into wind, 150 rpm drop on each), idle check, idle between 1600 to 1850 rpm,
- **F – Fuel and Flaps** fuel cock on, fuel sufficient for flight, flaps operating symmetrically.
- **T – Trim** Check trim set for takeoff
- **W – Wind** Check wind speed and direction
- **A – All clear** Confirm all clear on approach, R/T call if required and line up on runway

Normal take-off: For a non-performance takeoff, into wind, flaps can either be left up (cruise) position, or half deployed (11 degrees). When lined up and rolling straight smoothly apply full power. Keep ground roll straight using the rudder whilst holding the ailerons neutral and with the elevator slightly up to reduce the weight on the nose wheel. When the airspeed rises to 45mph IAS gently ease the stick back and rotate off. Adopt a shallow climb attitude allowing the airspeed to increase to 70mph IAS and adopt a climbing attitude to hold this airspeed. Above 300 feet AGL the flaps are stowed (if applicable), there will be a slight tendency for the aircraft to pitch up requiring a small adjustment to the trim.

Climb: When in the climb the nose high attitude and will obscure forward view. For safety reasons it is recommended that a periodic weave or lowering of the nose is practiced to clear the blind spot. For prolonged ascents a cruise climb at reduced power setting and slightly higher airspeed is recommended as this will increase forward field of view and maintain a cooler running engine.

Short field takeoff: For a short takeoff select half flap deflection (11 deg). Start take off roll from as close to the beginning of the field as possible. Hold the elevator neutral (smooth surfaces only) or slightly up (rough runways). When the airspeed increases to 45mph IAS rotate and lift off. Once airborne allow the aircraft to accelerate to 50mph IAS for best obstacle clearance.

Should power loss be experienced at the early climb out stage prompt action will be needed to lower the nose to obtain glide speed.

When clear of obstacles allow the aircraft to accelerate to 70mph IAS and at 300 feet AGL retract the flaps.

It is important to always pick an abort point before attempting to take off from a short field. If the aircraft approaches the abort point before lifting the take off should be stopped by closing the throttle, holding the stick back and apply the brakes if required.

Soft field takeoff: Select half flap. Avoid stopping the aircraft whilst entering the runway and roll into the takeoff run. Hold the stick aft until the nose wheel un-sticks and then balance the aircraft in the rotate attitude whilst speed increases. This will help reduce rolling resistance and keep overall drag to a minimum. Allow the aircraft to lift off at around 45mph IAS and accelerate to 70mph IAS before adopting the climbing attitude. At 300 feet clean up the flaps.

Crosswind takeoff: The maximum takeoff/ landing crosswind limit is 20mph. Pilots are advised to avoid crosswind components greater than 20mph especially if the cross wind is gusting. Flaps are not recommended during a cross wind take off. At the start of the takeoff roll hold the stick in the direction of the wind to raise the into wind aileron to prevent the wing being picked up early, hold the elevator neutral. Use the rudder to steer straight. Allow the aircraft to accelerate, reduce the aileron deflection as the speed picks up and rotate off at 68mph IAS. Adopt a shallow climb attitude and gently yaw the aircraft into wind to counter the drift; centralise the ailerons as required.

Normal landing: Set full flaps and approach at 60mph IAS; this speed can be increased to 65mph IAS in turbulent conditions. Round out should be initiated around 15-20 ft and hold-off 3-4 ft above the runway. Maintain back pressure on the stick, touching down on the main wheels and gently lowering the nose wheel as the ground speed reduces.

Short field landing: Same procedure as for normal landing, however accuracy is the key. Accurate airspeed control is the key to short field performance and pilots new to the A/C must practice until this is achieved to be able to land in the published distance.

Soft field landing: Hold off for as long as possible to touch down slow and gently. Apply full up elevator to keep the nose wheel up as long possible. Continue to hold up elevator when the nose wheel is on the ground.

Cross wind landing: The a/c has a maximum crosswind component of 20mph. Land clean or with half flap. Set up a powered approach at a little higher airspeed than normal – around 65mph IAS. On finals yaw the aircraft (crab) into wind to maintain an accurate bearing on the runway centerline. Maintain the crabbed alignment to the point of rounding out. At this point coordinate the hold off with a gentle yaw to align the airframe axis with the runway centerline; hold off to touch down.

Alternatively the wing down method could be used; just before round out the into-wind wing is lowered and the airframe is yawed straight. Correct the cross wind drift by raising or lowering the into wind wing. Round out and hold off touching down with the into wind wheel first. Try to land after a short hold off without allowing the airspeed to decay too much. This will assist in maintaining control response.

Whichever method of landing used (wing down or crab) crosswind landings must be accurately controlled whilst still rolling to prevent the into wind wing lifting.

Using the wing down method aircraft touches down on the into wind main wheel first. Progressive aileron deflection should be applied into wind as the speed decays to control the rate of descent of the down wind wheel. The nose gear should be held off initially and gently lowered before rudder authority reduces and aerodynamic directional control is lost. As the nose wheel touches straighten the rudder to avoid a steering snatch due to the

rudder deflection applied against the crosswind. When the nose wheel is down maintain aileron into-wind and neutral or light forward elevator pressure should be applied to ensure adequate nose-wheel steering avoid yawing into wind.

Power off landing: Should the engine fail on the approach (or during any other phase of flight) it is essential to lower the nose and trim for the best glide (60 mph IAS). The glide ratio will be lower than the normal engine idle, at about 7.5 to 1, due to the additional drag of the static propeller. On approach it is best practice to approach with the flaps raised and aim for a touch down 1/3rd of the way down the usable runway to ensure threshold clearance. Crossing the threshold, select full flap and maintain airspeed to the normal round out height; this will ensure an early touchdown. Hold off , land as normal .

Cruise: The A/C has a large range of cruise speed. At the higher values fuel consumption will be correspondingly higher. Cruise is set up in the normal way by selecting the required attitude and power and trimming off any residual pitch forces.

Turning: Turning requires rudder co-ordination to maintain balance. During any turn the stall speed will increase and this will be proportional to bank angle. The stalling speed at 30 degree bank will rise to 48mph IAS at max takeoff weight.

Flight in Turbulence: The A/C has powerful controls and handles turbulence well. However, do not fly above the maneuver speed (Va) of 86mph IAS in turbulence. At speeds above Va it is possible for strong gusts to overstress the aircraft.

Stalling:

Stall Speed Full flaps	42mph IAS
Stall speed clean	44mph IAS

These speeds represent the worse case in normal service. Lower takeoff weights and more rearward CG will lower the stalling speed.

Pilots should also remember that:

- Stall speed increases during turns and maneuvers
- Ice on the aircraft will also increase stalling speeds.

Slow flight characteristics prior to stall can be indicated by:

- Lightening of controls accompanied by reduced effectiveness
- Reduced airflow noise (most noticeable at low power settings)
- High nose attitude
- Rearwards position of control stick and back pressure
- A slight buffet may be felt at the insipient stage of the stall

To recover normal operating airspeed at the slow flight stage, simply move the stick forwards and apply power.

Wings Level, Power Off Stall: The aircraft can safely be stalled at a deceleration rate of 1mph/s. Max pitch attitude is 45 degrees, and stall warning is given about 2mph / 1 Kt/s above the stall by buffet. Stall is normally marked by a mushing descent with buffet or nose drop. If the stall is approached at a greater rate of speed decay (5mph/s) it is possible to achieve a stall break at lower than 40mph IAS.

Stall recovery is effected by lowering the nose and applying power. As soon as the airspeed exceeds 50mph IAS the nose can then be raised back to level flight. The expected height loss between stall and a coordinated recovery is approximately 50 ft with power and 100 ft without power.

Wings Level, Power On Stall: Characteristics are similar to the power off case except the nose will achieve a higher pitch up attitude. The slipstream and torque effect of the high power settings requires more positive rudder correction during the approach to the stall. Stalling out of balance can result in considerable wing drop if left unchecked. Power on stall recovery is achieved by pitching the nose down (stick forwards) whilst correcting any wing drop using opposite rudder. Once airspeed has been restored the aircraft can be re-trimmed.

Turning Stalls: Stall speeds are increased with bank angle. The A/C often has the characteristic of rolling towards wings level as the stall occurs. Recovery is standard. Move the stick forwards to reduce angle of attack and apply power. At the same time apply opposite rudder against any rolling tendency. Once the aircraft is safely above the stalling speed coordinated aileron and rudder can be used to level the wings. The stalling speed at 30° angle of bank will increase to 46mph IAS at max takeoff weight and a power on recovery can be achieved with less than 100ft of height loss.

Aerobatics: Not permitted.

Departures from Controlled Flight, Spinning: Deliberate spinning is prohibited. However, it may be possible by extreme control deflections to enter a spin through extreme miss-handling. Typical maneuvers that could lead to an inadvertent spin entry include stalling the aircraft in a turn or extreme rudder imbalance at the point of a stall. Should this happen, the spin can be recognized by a steep nose-down pitch attitude (about 45 degrees nose down) and rapidly yawing one way or the other. For the Clipper it is recommended that recovery is effected by closing the throttle and centralising the controls. The spin will stop and the a/c enter a steep nose down dive. As the airspeed increases the nose can be gently raised back to level flight.

If the recommended Clipper recovery proves to be ineffective, a standard spin recovery should be attempted by ensuring idle power is selected and then applying full opposite rudder to the rotation. Finally apply forward stick. When the rotation has stopped then centralise the rudder, allow the airspeed to increase in a dive and gently ease out to level when flying speed has been achieved.

Other Departures from Controlled Flight : Other departures from controlled flight are likely either to be due to damage to the aircraft, or hazardous flying conditions. In any case, land as soon as possible and examine the aircraft, particularly the flying controls, for any damage.

Leaving the Aircraft

Park the A/C nose into wind when possible. Tie down using ropes attached to the upper wing struts at the wing spar interface and apply the parking brake.

Cover the windscreen to prevent damage from intense sunlight, scratches etc. Note that care should be taken to prevent dragging of the covers during fitting. Clean the polycarbonate screens with a soft cloth or using with a weak soap solution.

Refit the Pitot Cover.

6. PERFORMANCE

Best climb angle: 472.5kg AUW achieved 732ft/min at 70mph climb speed.

Best climb speed: 450kg AUW achieved 845ft/min at 70mph climb speed.
472.5kg AUW achieved 759ft/min at 70mph climb speed.

The best glide speed: 65mph, decent 566ft/min, glide 10:1

Takeoff performance: Take-off performance for short dry grass :

Distance from brakes off to 15m height = 189m (includes a 30% margin as per S51)

Note: Takeoff performance should be marginally better for the 450kg AUW.

Landing performance: Landing onto short dry grass zero wind speed:

450kg AUW: 15m height to full stop = 157m

472.5kg AUW: 15m height to full stop = 163m

Approach speed 60mph IAS with full flaps.

It is recommended that these figures be increased by 30% when landing in maximum crosswind.

7. WEIGHT & BALANCE

All Up Weight (AUW): The standard Clipper has an AUW of 450kg. This can be increased to 472.5kg with the fitment of an approved ballistic parachute recovery system. Please be sure you understand the AUW limits of your particular aircraft.

CG Datum. The CG datum is at the front wheel axle centerline and measurements are in metres and kg.

CG limits: The Clipper 450 & 472.5kg AUW variants have been flight tested and approved for a CG range of 1000 mm to 1260mm aft of datum.

CG moment arms. The moment arms of the seats, fuel tank(s) and other items are shown in the Weight and CG report .

Weighing. The A/C will have been weighed when first built, and must be re-weighed at intervals as laid down by the BMAA and CAA. Details of the weighing must be entered in the aircraft logbook.

Cockpit Loading:

Maximum combined pilot + passenger mass = 172kg

Maximum single seat occupant mass = 110kg


Minimum allowable take off fuel = 13 litres

Maximum allowable take off fuel = 100 litres (solo, see below)

Maximum allowable baggage = 5kg (conditional, need to trade fuel)

Allowable fuel load, 450kg AUW:


- Add together the pilot + passenger mass.
- Use the total along the horizontal axis of the graph below; read off the permissible fuel volume.
- If baggage is carried then the allowable fuel volume will be reduced by (baggage mass / 0.72) litres.
- If fuel load less than 15litres then reduce baggage mass or remove.

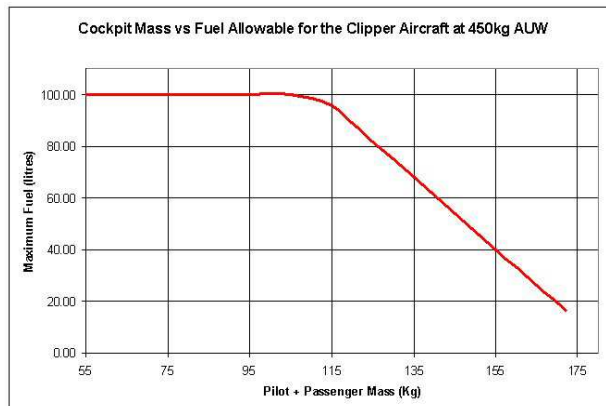

Allowable fuel load, 447.5kg AUW:

- Add together the pilot + passenger mass.
- Use the total along the horizontal axis of the graph below; read off the permissible fuel volume.

- If baggage is carried then the allowable fuel volume will be reduced by (baggage mass / 0.72) litres.
- If fuel load less than 13litres then reduce baggage mass or remove.

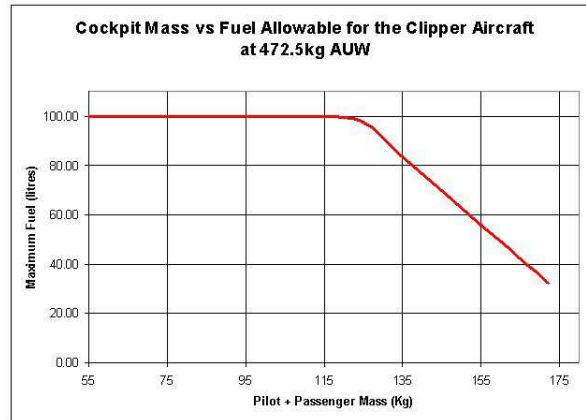

CG Limits: BCAR Section S, issue 5, require that provided the cockpit, baggage and fuel loading guidelines noted above are met then the aircraft will have its CG within the acceptable range of 1000 to 1260mm aft of datum.

Pilots should be aware that stick forces and displacements will become lighter with aft CG (typically a heavy solo pilot and full fuel) and heavier with forward CG (low fuel, light solo pilot). In addition, at aft CG, the stability will be reduced and as a consequence the aircraft will have less tendency to return to the stable condition when in, for example, turbulent conditions.

Flying outside of the permitted CG limits is prohibited

8. RIGGING & DERIGGING

To attach the wings to the Clipper:

- With the wing tip raised to approximately the rigged height, slide the wing root into place to engage in the root brackets.
- Insert the wing root fixing bolts
- Attach the lift struts and jury struts
- Tighten all attachment bolts and insert safety rings
- Connect flap pushrod
- Connect Pitot line
- Connect aileron cables
- Ensure aileron cables are crossed as per placard in cockpit on central upright.
- Final inspection of all nuts and bolts, cable routing and attachments

To remove the wings from the Clipper:

- Disconnect aileron cables
- Disconnect pitot line
- Disconnect flap pushrods
- Remove safety rings from lift strut bolts
- Remove nuts from lift strut bolts and spar bolts
- Support wing tip
- Remove lift struts
- Remove spar bolts (wing root)
- Slide wing outwards until spar is clear of cabin.

The tail plane is not designed to be a regular de-rig item, however it may be removed for long distance road transportation using a trailer. When re assembling the tailplane parts replace all Nyloc nuts that were removed for disassembly. Finally it is advised that the a/c be by a BMAA inspector

MANUAL

The operators and maintenance manual for the engine fitted to this aircraft follows this page.

And then

MAINTENANCE SCHEDULE Reference to the
The BMAA maintenance schedule MMS-1

Followed by a typical
WEIGHT AND BALANCE REPORT

9. ROUTINE MAINTENANCE

Aircraft Structure: The aircraft is to be maintained to Microlight Maintenance Schedule MMS-1, Engine maintenance should be in accordance with the engine maintenance manual.

The following additional points are required during routine airframe maintenance and inspection:

Monthly Check removes pitot connector and drain any moisture found at the lift strut connection point

- When inspecting control runs it is good practice to rotate pulleys 90 degrees to reduce wear spots.
- If a wooden propeller is fitted, check securing bolts for tightness after seasonal changes in temperature and humidity

Inspection of the A/C:

- Wing battens should not be removed to check profile. An external template of batten profile can be made on stiff card or plastic and the shape can be checked externally.
- Inspection of the rear fuselage structure can be made visually via access provided by the side zip panels.
- Do not clean spark plugs. Simply replace when they have reached their specified life.

Component life / major inspections.

It is recommended that after 1000 hours or 5 years that the SLA should be subject to a major strip down inspection. This inspection should include the following points:

- Removal of covering.
- Replacement of leading and trailing edge spar to fuselage securing bolts.
- Replacement of the lift strut securing bolts, these must be changed after 500 hours.
- Replacement of all fasteners showing signs of corrosion or wear.
- Inspect the airframe for distortion, corrosion and wear. Replace where required.
- Detailed inspection of all critical bolted joints for movement and cracking around holes.

Elevator cables should be regularly inspected for wear at the point where they pass through the pulleys behind the control stick. It is recommended they are changed after 500 hours.

All other control cables . It is recommended they are changed after 1000 hours.

Engine Maintenance. It is recommended the engine maintenance be carried out in accordance with the Rotax procedures as indicated in the manual supplied with the Aircraft (as modified by any service bulletins if applicable).

It is also recommended that if the owner/operator is not confident in their ability to carry out any maintenance work then professional assistance should be sought.

10. **REPAIR**

10.1 General. Many repairs require approval either by Medway Microlights or the BMAA. If in any doubt seek guidance before commencing work. All repairs must be well documented in the logbook (either full description of the work carried out, or, preferably, a reference to a detailed worksheet) and signed for by the person doing the work.

10.2 Repairs by replacement. Repairs by replacement, using the correct parts and not requiring fabrication processes - i.e. simply unbolting damaged parts and bolting on genuine replacements - do not require approval. However, if the repair involves disturbing primary structure and/or control systems, a second, independent inspection must be performed by a suitably qualified person - such as an aircraft inspector or engineer for example - and recorded in the logbook. It is also recommended that a second pair of eyes looks over non safety-critical work as well

10.2 Repairs involving fabrication processes. Other repairs require approval either from Medway Microlights or the BMAA. Approval must be obtained before the repair is commenced! Such repairs will require formal inspection either by a Medway Microlights' nominated person and/or a BMAA Inspector.

10.3 Sail Repairs. Sail (flexible surface) repairs must be carried out in accordance with the manufacturer and or BMAA Technical Information Leaflet TIL 015.

10.4 Repairs to the Engine. These should be carried out in accordance with the maintenance manual for the engine fitted.

Weight values for this A/C the following describes the basic dimensions of the Aircraft:

Length	5.72m
Height	2.26m
Span	8.6m
Mean chord	1.52m
Wing area	14.1m ²
Dihedral angle	1.2 degrees
Sweepback angle	0 degrees
Washout	1 degree
Fin area	0.4m ²
Rudder area	0.46m ²
Horizontal tail plane area	1.08m ²
Elevator area	0.92m ²
Aspect ratio	5.64:1
Undercarriage track width	1.6m
Undercarriage wheelbase	1.4m
Fuel capacity	100 litres
Tyre Pressure,	Mains 26psi, Nose 26psi.

The EFIS is to be operated in accordance with MGL Stratomaster Enigma Series EFIS User Manual.

General operation

- o *The pilot must familiarise himself with the instrument before flight – in particular to ensure he can easily return to a default screen.*

User configuration

- o *Screens intended to be displayed during flight must contain the required instruments as defined in the SLA TADS BM 74 in its latest issue.*

- o *Air speed and power plant instruments: must be displayed in the same units as corresponding limitations are placarded.*
- o *Power plant instruments: maximum and, if applicable, minimum safe operating limits must be marked with a clear warning, eg a red line or red sector.*
- o *Air speed indication (recommended): speed ranges V_{so} - V_{fe} , V_{so} - V_a and $>V_{ne}$ should be clearly marked white, green and red respectively, eg with coloured lines or sectors.*
- o *Advice must be taken from Medway Microlights or the BMAA if the displayed air speed is to be corrected for position errors (because all airspeed limitations are provided as Indicated Air Speeds, not Calibrated Air Speeds).*

11 PARACHUTE SAFETY SYSTEM

11.1 Introduction: The Clipper 472.5kg AUW aircraft parachute recovery system provides the pilots last alternative in such events as pilot incapacitation, aircraft critical structural or control damage, engine issues, poor pilotage etc. It should be noted that the parachute installation in the Clipper is aerodynamically untested and flight under parachute governance will be uncontrolled and downward. It is therefore recommended that the aircraft be conventionally landed if possible. Use of the parachute will significantly damage the aircraft.

11.2 Parachute Recover Type: A “Galaxy Rescue System” involving a parachute recovery system is fitted to the Clipper 472.5kg AUW aircraft. Any maintenance or repairs to the Galaxy system should be made in accordance Galaxy’s Instruction Manual for Assembly and Installation.

11.3 Parachute Maintenance: All maintenance carried out to the parachute recover system shall be entered into the aircraft log book and carried out in accordance with the Galaxy instruction manual.

11.4 Parachute Inspection:

Pre-flight the parachute installations should be checked for the following:

- Moisture in, on and around the parachute container; if wet the canopy should be removed, aired, dried and re-packed.
- No obstructions exist above or below the rocket motor pack.
- All lines from the rocket motor to the parachute pack are attached and unrestricted.
- All parachute risers are in position and undamaged.
- Disarming lock removed and safety pin fitted for flight.

Post Flight:

- Safety pin remove, disarming lock fitted.

11.5 Maintenance Intervals: At six year intervals the following maintenance is mandatory:

- The parachute rocket motor must be replaced.
- The parachute canopy must be aired, dried and repacked.
- Suitable maintenance entries made in the a/c log.

11.6 Precautions: During inspection and arming the following precautions should be noted:

- Never position yourself in front (or behind) the rocket motor.
- Ensure that the deployment lever is not moved between removal of the disarming lock and the fitment of the safety pin.

11.7 Parachute deployment: Actions and notes on the event:

- Slow the aircraft if possible.
- Set engine idle if still available.
- Remove the safety pin and pull the red release handle at least 100mm.
- Expect deceleration loads of between 2.5 and 5.5g depending on the aircraft speed, angle of attack etc..
- Risers will straighten to ensure the parachute supports the airframe over the CG point.
- The engine and/or control remaining available could be used to help steer the aircraft to the ground but could be ineffective
- Expect a very steep approach
- If operating the engine is ineffective the it should be shut down, fuel cock closed and electrical systems switch off prior to impact.
- All other emergency drill actions should be taken such as harness secure, hatches de-latched etc..
- Good luck!

11.8 Placards and warnings:

The following placard shall be fitted adjacent to the release lever:

WARNING-EMERGENCY PARAHUTE
Remove safety pin and pull handle to deploy.
Unapproved Equipment.
Refer to Pilots handbook for detail.

The following placard shall be fitted on the side of the cabin adjacent to the top of the aft of each door jamb:

WARNING-EMERGENCY PARAHUTE FITTED
Stored Energy Device May Be Armed.
Do not place or attach any object on
the top of the cabin in the path of the rocket motor.

The following warning shall be visible in the cabin:

OCCUPANT WARNING

The parachute recovery system installation has been approved by the BMAA on the basis that, as far as is practicable to demonstrate, it will create no hazard to the aeroplane, its occupant(s) or ground personnel whilst the system is not deployed; and that when properly maintained, the risk of malfunction, deterioration or inadvertent

deployment is minimised. The BMAA has not approved the system itself or considered the circumstances, if any, in which it might be deployed. The effectiveness of the system for the safe recovery of the aeroplane has not been demonstrated.”