

LF26/LF39 Connection guidelines
V2.02 Date : 02/05/2019

Connection of the Cabling to the Injection system:

AWG20 Red/Black = +12V ECU1
AWG20 Brown = -12V ECU 1

AWG20 Red/White = +12V ECU2
AWG20 Brown = -12V ECU 2

AWG20 Pink = Oil Temperature sensor
AWG20 Gray = Oil lamp switch
AWG20 Purple = Oil pressure sensor
AWG20 Green = CHT sensor

AWG22 Black = Warning light ECU1
AWG22 White = Warning light ECU2

AWG22 Gray = RPM output (2 pulses /rev)
(sometimes external pull up resistor needed)

AWG22 Green = Start prevent relais.

